


THRIVING ON INNOVATION  
**LAGUNA TOOLS**™

Gregory Machinery Pty Ltd  
www.gregmach.com info@gregmach.com  
PH: 07 33755100



# FUSION TABLESAW

## MTSAW17536110-0130 OPERATING MANUAL

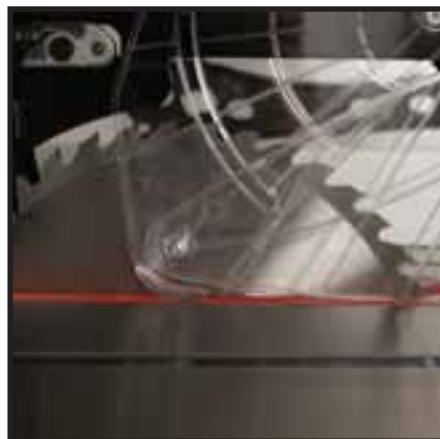

## Table of contents

READ CAREFULLY BEFORE OPERATING THE MACHINE .....	2
10" TABLE SAW .....	4
GROUNDING INSTRUCTIONS .....	5
MOVEABLE CASTER & MACHINE LEVELING .....	6
RESET PROTECTOR .....	6
SAFETY SWITCH.....	7
UNPACKING .....	7
CLEAR UP .....	7
PLACEMENT THE TABLW SAW .....	7
ASSEMBLY TABLE SAW.....	8
INSTALL BLADE GUARD .....	10
RIVING KNIFE.....	11
TABLE INSERT .....	11
SAW BLADE.....	12
FENCE ASSEMBLY .....	12
MITER GAUGE.....	14
MAINTENANCE & ADJUSTMENTS .....	15
TYPE OF CUT .....	18
PARTS DIAGRAMS.....	21
PARTS LIST .....	25

## READ CAREFULLY BEFORE OPERATING THE MACHINE

Read this manual completely and observe all warning labels on the machine. We always made every attempt to provide a safe, reliable, easy-to-use piece of machinery. Safety, however, is ultimately the responsibility of the individual machine operator. As with any piece of machinery, the operator must exercise caution, patience, and common sense to safely run the machine. Before operating this product, become familiar with the safety rules in the following sections.

1. Do not operate the saw when tired, distracted, or under the effects of drugs, alcohol or any medication that impairs reflexes or alertness.
2. The working area should be well lit, clean and free of debris. Don't use power tools in damp or wet locations, or expose them to rain.
3. Keep children and visitors at a safe distance when the saw is in operation; do not permit them to operate the saw.
4. Childproof and tamper proof your shop and all machinery with locks, master electrical switches and switch keys, to prevent unauthorized or unsupervised use.
5. Stay alert! Give your work your undivided attention. Even a momentary distraction can lead to serious injury.
6. Fine particulate dust is a carcinogen that can be hazardous to health. Work in a well-ventilated area and whenever possible use a dust collector and wear safety glasses only have impact resistant lenses, also use face or dust mask if cutting operation is dusty.
7. Do not wear loose clothing, gloves, bracelets, necklaces or other jewelry while the saw is in operation. Wear protective hair covering to contain long hair and wear non-slip footwear.
8. Be sure that adjusting wrenches, tools, drinks and other clutter are removed from the machine and/or the feed table surface before operating.
9. Keep hands well away from the blade and all moving parts. Use a brush, not hands, to clear away chips and dust.
10. 10. Be sure that the blade is securely installed and in proper cutting direction before operation. Feed work into a blade or cutter against the direction of rotation of the blade or cutter only.
11. Be sure the blade has gained full operating speed before beginning to cut.
12. Always use a clean, properly sharpened blade. Dirty or dull blades are unsafe and can lead to accidents .Follow instructions for lubricating and changing accessories.
13. If using a power feeder, stop the feeder before stopping the table saw.
14. Do not push or force stock into the blade. The saw will perform better and more safely when working at the rate for which it was designed.
15. Use suitable support when cutting stock that does not have a flat surface. Always hold stock firmly against the fence when ripping, or against the miter gauge when cross-cutting.
16. To minimize risk of injury in the event of workpiece kickback, never stand directly in-line with the blade or in the potential kickback path of the work piece.

17. Avoid working from awkward or off balance positions. Do not overreach while cutting; keep both feet on floor. Never lean over or reach over the blade and never pull the work piece over the blade from behind.
18. Use out feed support or have an assistant help when ripping long material.
19. Keep blade guards in place and in working order. If a guard must be removed for maintenance or cleaning, be sure it is properly reattached before using the tool again. Never leave the machine running with the power on when not in operation. Don't leave tool until it comes to a complete stop.
20. Use of parts and accessories NOT recommended by supplier may result in equipment malfunction or risk of injury.
21. Never stand on machinery. Serious injury could result if the tool is tipped over or if the blade is unintentionally contacted.
22. Always disconnect tool from power before servicing or changing accessories such as blades, or before performing any maintenance, cleaning or adjustments, or if the machine will be left unattended.
23. Make sure that switch is in "OFF" position before plugging in the power cord.
24. Make sure the tool is properly grounded. If equipped with a 3-prong plug it should be used with a three-pole receptacle. Never remove the third prong.
25. Do not use this saw for other than its intended use. If used for other purposes, we disclaims any real implied warranty and holds itself harmless for any injury, which may result from that use.
26. Use clamps or a vise to hold work when practical. It's safer than using your hand and it frees both hands to operate tool.
27. Before further use of the tool, a guard or other part that is damaged should be carefully checked to determine that it will operate properly and perform its intended function - check for alignment of moving parts, binding of moving parts, breakage of parts, mounting, and any other conditions that may affect its operation. A guard or other part that is damaged should be properly repaired or replaced.

**CAUTION:** This means that if precautions are not heeded, it may result in minor or moderate injury and/or possible machine damage

**WARNING:** This means that if precautions are not heeded, it could result in serious injury or possibly even death.

**WARNING:** The operation of any power tool can result in foreign objects being thrown into your eyes, which can result in severe eye damage. Before beginning power tool operation, always wear safety goggles or safety glasses with side shields and a full face shield when needed. We recommend Wide Vision Safety Mask for use over eyeglasses or standard safety glasses with side shields. Always use eye protection which is marked to comply with ANSI Z87.1.

## 10" TABLE SAW

Thank you for choosing this table saw. This unit is carefully tested and inspected before shipment and if properly used. To ensure optimum performance and trouble free operation a reasonable amount of care and attention is required.

To get the most from your new table saw, please take the time to read this manual before assembling, installing and operating the unit.

The table saw features a circular blade underneath that can be raised and lowered to control the depth of cut.

The rail-mounted fence, which slides freely toward or away from the blade, is used as the main cutting guide for the workpiece.

The miter gauge is used to guide and support the workpiece during the cut when the workpiece cannot slide against the fence in a stable manner that miter gauge body can be rotated to allow a wide range of cutting angles.

The blade guard assembly is equipped with a spreader, anti-kickback pawls and riving knife, which work to prevent kickback and stop or slow kickback if it happens. The riving knife is used when the guard is removed for certain non through cuts.

The push Stick is used to support the workpiece during the cut and reduces the risk of injury by keeping hands away from the blade while cutting.



Saw




Fence




Miter Gauge



52" Rail and Extension Table

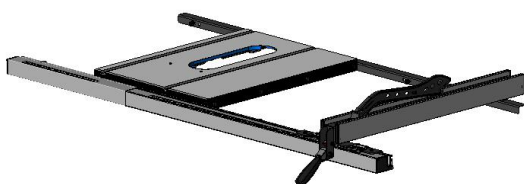

Blade Guard

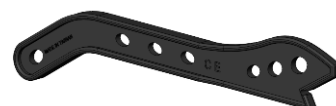

Push Stick

**Note:** In Canada, the use of a temporary adapter is not permitted by the Canadian Electrical Code.

## GROUNDING INSTRUCTIONS

1. All grounded, cord connected tools: In the event of a malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This tool is equipped with an electric cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into a matching outlet that is properly installed and grounded in accordance with all local codes and ordinances. Do not modify the plug provided - if it will not fit the outlet, have the proper outlet installed by a qualified electrician.

Improper connection of the equipment-grounding conductor can result in a risk of electric shock. The conductor with insulation having an outer surface that is green, with or without yellow stripes, is the equipment-grounding conductor. If repair or replacement of the electric cord or plug is necessary, do not connect the equipment-grounding conductor to a live terminal. Check with a qualified electrician or service personnel if the grounding instructions are not completely understood, or if in doubt as to whether the tool is properly grounded.

Use only 3-wire extension cords that have 3-prong grounding plugs and 3-pole receptacles that accept the tool's plug. Repair or replace damaged or worn cord immediately.

2. Grounded, cord-connected tools intended for use on a supply circuit having a nominal rating less than 150 volts: This tool is intended for use on a circuit that has an outlet that looks like the one illustrated in Sketch A, Fig. A. The tool has a grounding plug that looks like the plug illustrated in Sketch A.

A temporary adapter, which looks like the adapter illustrated in Sketches B and C in Fig. A, may be used to connect this plug to a 2-pole receptacle as shown in Sketch B if a properly grounded outlet is not available. The temporary adapter should be used only until a properly grounded outlet can be installed by a qualified electrician. The green-colored rigid ear, lug, and the like, extending from the adapter must be connected to a permanent ground such as a properly grounded outlet box.

3. Grounded, cord-connected tools intended for use on a supply circuit having a nominal rating between 150-250 volts, inclusive:

This tool is intended for use on a circuit that has an outlet that looks like the one illustrated in Sketch D Fig. A. The tool has a grounding plug that looks like the plug illustrated in Sketch D.

Make sure the tool is connected to an outlet having the same configuration as the plug. No adapter is available or should be used with this tool. If the tool must be reconnected for use on a different type of electric circuit, the reconnection should be made by qualified service personnel and after reconnection, the tool should comply with all local codes and ordinances.

## EXTENSION CORDS

Use proper extension cord. Make sure your extension cord is in good condition. When using an extension cord, be sure to use one heavy enough to carry the current your product will draw. An undersized cord will cause a drop in line voltage resulting in loss of power and overheating. Fig. B shows the correct size to use depending on cord length and nameplate ampere rating. If in doubt, use the next heavier gauge. The smaller the gauge number, the heavier the cord.

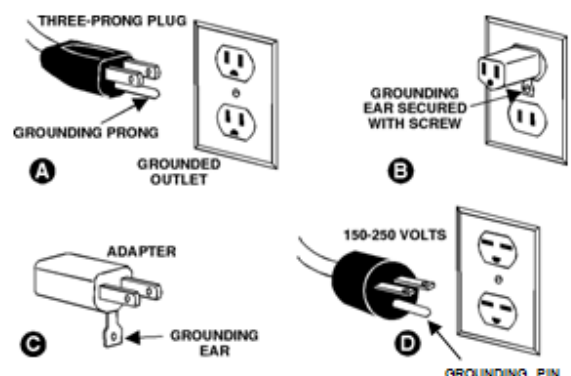


Fig. A

Ampere Rating		Volts	Total length of cord in feet			
Ampere Rating		115/23	25'	50'	100'	150'
More Than	Not More Than	AWG				
0	6		18	16	16	14
6	10		18	16	14	12
10	12		16	16	14	12
12	16		14	12	Not recommended	

Fig. B


instructions for the proper fuse/breaker. Do not use a fuse/breaker of greater capacity without consulting a qualified electrician.

- Low voltage. Although the motor is designed for operation on the voltage and frequency specified on the motor, normal loads will be handled safely on voltage no more than ten percent above or below that figure. Heavy loads, however, require that voltage at motor terminals equal the voltage specified on the motor.

## MOVEABLE CASTER & MACHINE LEVELING

The moveable caster on this saw with (2) casters (2) leveling screws and (2) feet that will easier to move this saw and to place this saw as you want.

The machine leveling adjustment, using a open wrench to turn the (2) leveling screws located.

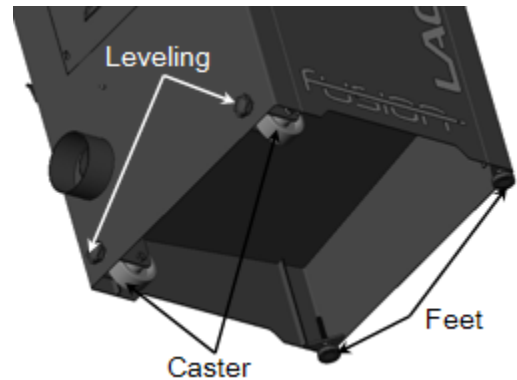

## RESET PROTECTOR

Your saw comes equipped with a manual-reset thermal-overload protector designed to open the power line circuit when the motor temperature exceeds a safe level, when motor is overloaded, or when a low voltage condition exists.

NOTE: This motor should be blown out or vacuumed frequently to prevent sawdust buildup which can interfere with normal motor ventilation.



Once the motor is cooled to a safe operating temperature, reset the thermal overload protector by pushing the red button on the front of the junction box. An audible click will indicate the thermal overload protector is reset. Once the switch button is reset, the saw may be started and operated as normal.

NOTE : If the reset button won't click into place immediately, the motor is still too hot and must be allowed to cool.

Frequent “blowing” of fuses or Tripping of circuit breakers may result if:

- Motor is overloaded. Overloading can occur if a workpiece is fed too rapidly or if the saw is misaligned.
- Motor circuit is fused differently from recommendations. Always follow



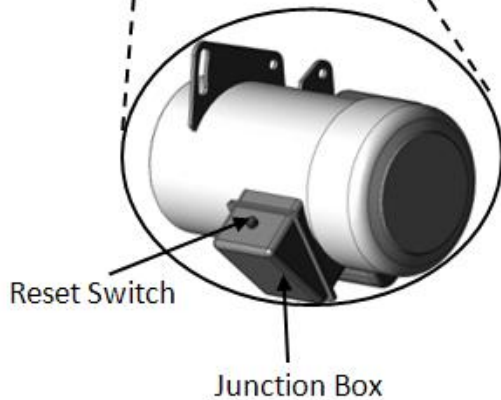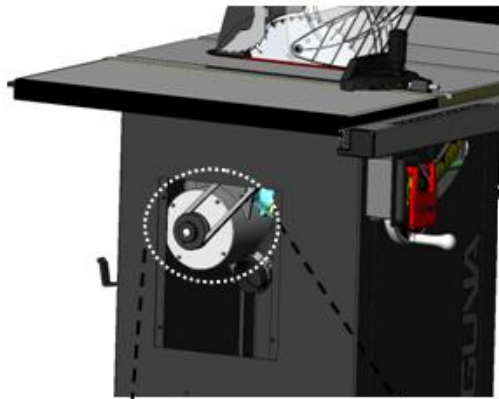

**NOTE :** Always check the connections, the load and the supply circuit whenever the motor fails to perform satisfactorily.

### SAFETY SWITCH

The table saw is equipped with a push-button switch that will accept a safety padlock (not included). See Fig. 1. To safeguard your machine from unauthorized operation and accidental starting by young children, the use of a padlock is required.


### UNPACKING

This table saw is very **heavy**. Get lifting help or use power lifting equipment such as a forklift to move this Table Saw.

### CLEAR UP

The protective coating on the saw table prevents rust from forming during shipping and storage. Remove it by rubbing with a rag dipped in kerosene, mineral spirits or paint thinner. (Dispose of potentially flammable solvent-soaked rags according to manufacturer's safety recommendations.)

A putty knife, held flat to avoid scratching the surface, may also be used to scrape off the coating followed by clean-up with solvent.

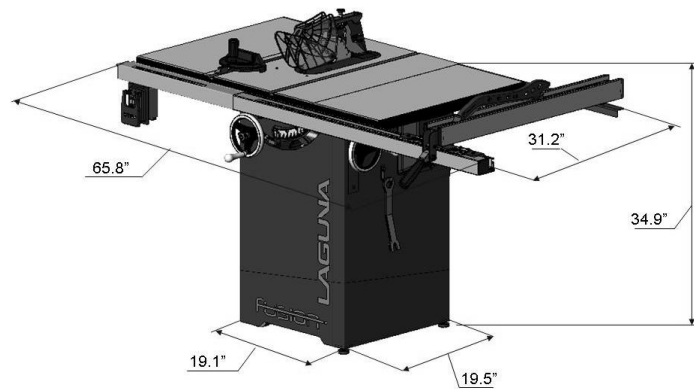

Avoid rubbing the saw's painted surfaces, as many solvent-based products will remove paint Fig. 2.

To prevent rust, apply a light coating of paste wax or use regular applications of any after-market surface protected or rust inhibitor.

### PLACEMENT THE TABLE SAW

This machine should be installed and operated only on a solid, flat and stable floor that is able to support the weight of the saw (312 lbs-142 kgs) and the operator.



Using the dimensions shown as a guideline, plan for placement within your shop that will allow the operator to work unencumbered and unobstructed by foot traffic or other tools or machinery.

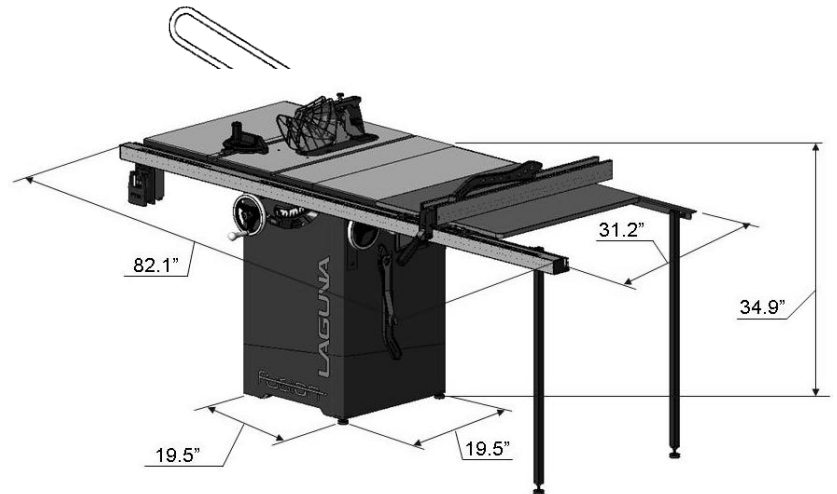


Fig. 1




With a screw driver, push a solvent-saturated rag into the T-slots to remove the grease.

Fig. 2

## ASSEMBLY TABLE SAW

### INSTALL THE TABLE EXTENSION WINGS

Attach the table extension wings to the main table using 8\*12mm hex head bolts (4 per wing), and 8 lock washers. Align the table extensions with the table and

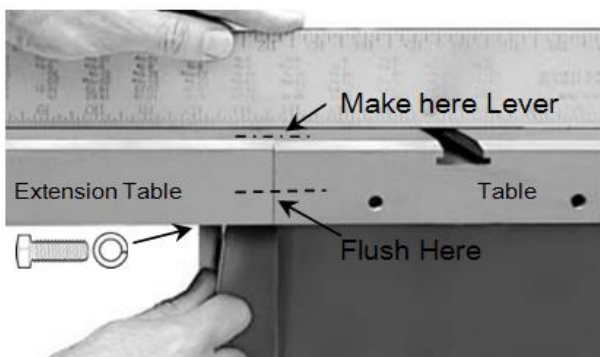

loosely attach the bolts. Place a straightedge on the table and extension as shown to align the extension table and then tighten down the bolts.

**Note:** Be sure that the table extension wings are flush with front edge.

### MOUNT FENCE STORAGE BRACKETS

The miter gauge and arbor wrench storage brackets are already installed on the saw. Install the fence storage brackets on the right side of the saw as shown in using two Phillips head screws and flat washers.




### FRONT


36" front rail with 2 pieces of Tubes & a join pin but 52" Rail is single piece.

1. Loosely thread the six square head bolts

to the front of the table.

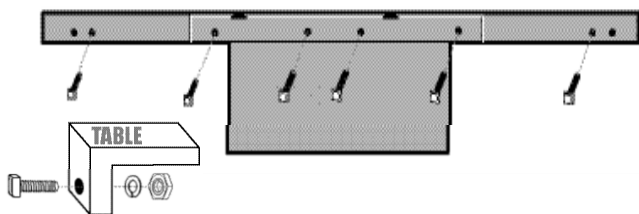


2. Do not tighten down the nuts; leave the square heads of the bolt protruding from the table

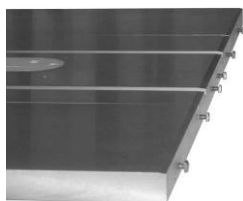

3. From the left side of the saw, slide the upper slot of the left (shorter) front rail onto the square head bolts




4. Set the left end of the rail flush to the outside edge of the extension wing.

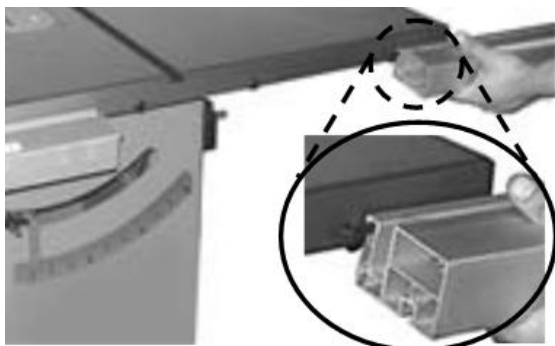

5. From the right side of the saw, slide the upper slot of the right front rail onto the square head bolts (for 36" rail only)

6. Fit the 2 rails together (for 36" rail only)

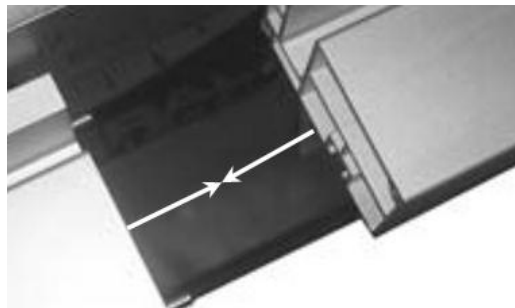


7. Tighten down the nuts to firmly secure the front rails to the table.

### REAR RAIL INSTALLED

36" rear rail with 2 pieces of rail but 52" Rail is single piece.

1. Use 6 cap screws with lock washers and nuts to assemble the rear rails to the rear of the saw as shown

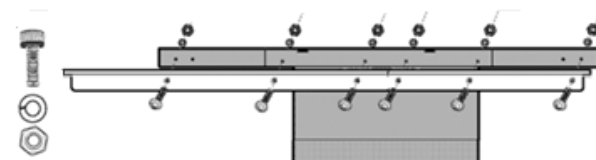


2. Make sure that the intersection between the two rear rails is leveled (for 36" rail only)




### RIGHT TABLE OF 52" RAIL INSTALLED

1. To place the right table assembly upright with extension table and align to the front rail mounting holes, then fasten the table to the front rail with two M8 hex bolts, 8 mm flat washers, and M8 hex nuts then fasten the table to the rear rail with two CAP screw w/ lock washers, 8 mm flat washers, and M8 hex nuts.

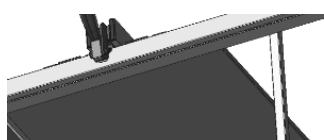



2. Install each foot with a M8 Hex nut A into the bottom of a support leg.

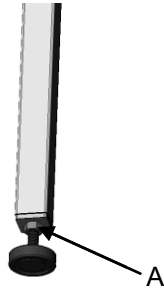

3. Fasten support leg to the main extension table on front rail with two M8 hex bolts, 8 mm flat washers, M8 hex nuts and f two CAP screw w/ lock washers, 8 mm flat washers, and M8 hex nuts on rear rail., then rotate both feet until they touch the ground, and tighten the hex nuts against the support legs to secure the feet.



### INSTALL BLADE GUARD


The blade guard assembly that consists of the clear polycarbonate shield, the spreader and the anti-kickback pawls on each side of that has important safety functions during the operation of the saw.

1. Disconnect saw from power!
2. Remover the table insert.
3. Insert the spreader into the bracket slot and tighten the lock knob shown to secure the spreader.
4. Tug the spreader up to verify it is locked.
5. Lift the blade guard cover just enough to slide the table insert into the table slot over the blade, then secure the insert with the knob on the front of the insert. It should

swing up high enough to accommodate the workpiece.

6. Lifting up the right spreader pawl, place a straightedge against the blade and the spreader.

When properly aligned the spreader/riving knife will be in the "alignment zone," shown in Fig. 3, and will be parallel with the blade.


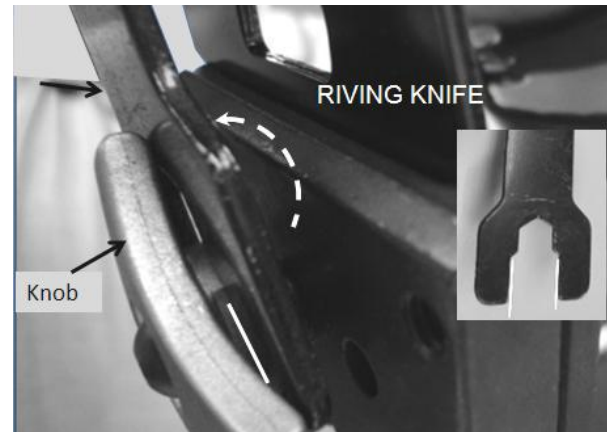


### LOOSEN LOCK KNOB

If you could not loosen the knob by your hands , please used the arbor wrench to put on the knob inside then turn the arbor wrench by counter-clockwise that could loosen the knob Fig. 4

### ANTI-KICK BACK PAWL

The anti-kickback pawls allow the workpiece to travel in only one direction. If the workpiece

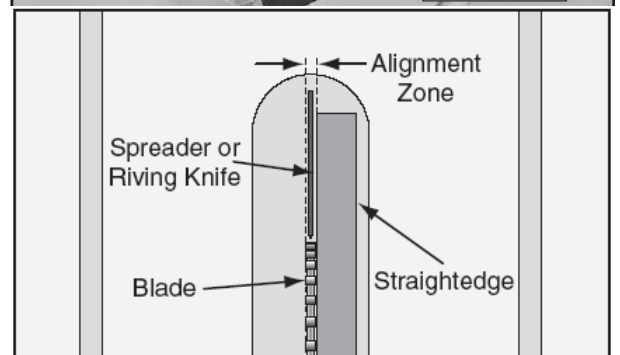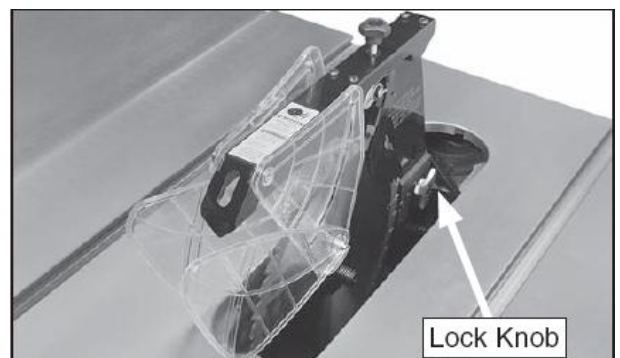

moves backwards, the pawls will dig into the workpiece to slow or stop it Fig. 5.

The pawls must return to their bottom-most position after pivoting.

**Note:** The right pawl is designed to tilt slightly away from the blade guard assembly to prevent the pawl from catching in the table insert.

If the pawls fail to return to the bottom position, the pivot spring may have been dislodged or broken and will need to be fixed/replaced.

Fig. 3

Fig. 4

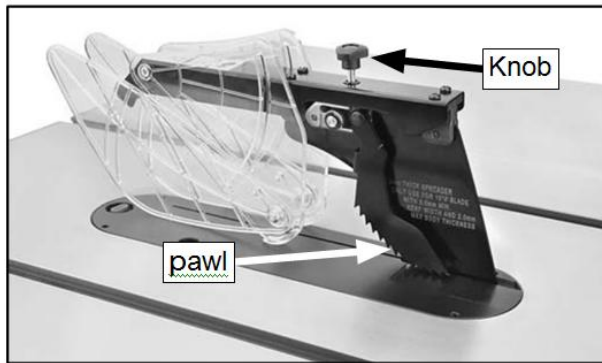


Fig. 5

## RIVING KNIFE


Use the riving knife for all non-through cuts made with a standard table saw blade or dado blade. Use the riving knife for those special operations where the blade guard or its components get in the way of safe operation, such as with very narrow cuts.

The key difference between the spreader and the riving knife is that the riving knife mounts below the blade's highest point of rotation

The riving knife must be kept within the range shown in Fig. 6 10" blade is required for operations that use a riving knife.

Do not use the riving knife with a dado blade hat has a diameter smaller than 10". Otherwise, the riving knife height will exceed the blade height and the workpiece will hit the riving knife during forcing the operator into a dangerous situation of trying to turn the saw off with the workpiece stuck halfway through the

cut  
Fig. 7.

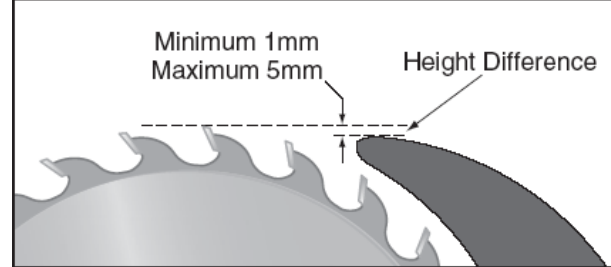

**! WARNING:** In order to work properly, the riving knife cannot be bent or misaligned with the blade. If the riving knife gets accidentally bent, take the time to straighten it or just replace it. Using a bent or misaligned riving knife will increase the risk of kickback!

## TABLE INSERT

In Fig. 8

To install the zero clearance insert:

1. Disconnect saw from power!
2. Check to make sure the blade is properly installed.
3. Install the table insert
4. Adjust the table insert set screws with a 2.5mm hex wrench to make sure the insert is flush with the table then turn the lock knob to secure the insert.
5. Turn ON the saw.
6. Set the blade angle at 45° then slowly raise the blade to the maximum
7. Set the blade angle at 0° then slowly raise the blade to the maximum height that will be used during normal operations.
8. Use a straightedge to determine whether the insert is level Fig.9 with the table top turn each of the 5 adjusting screws with the allen wrench until done.

Fig. 6

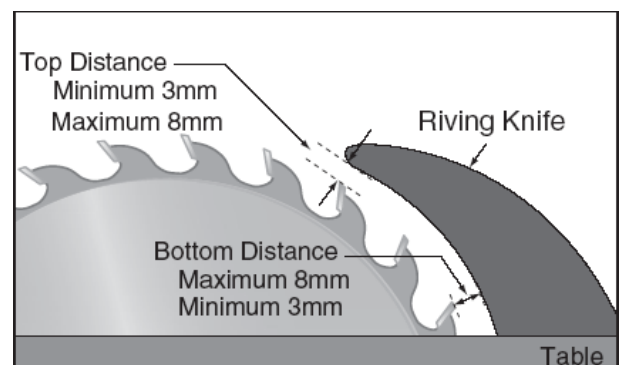


Fig. 7



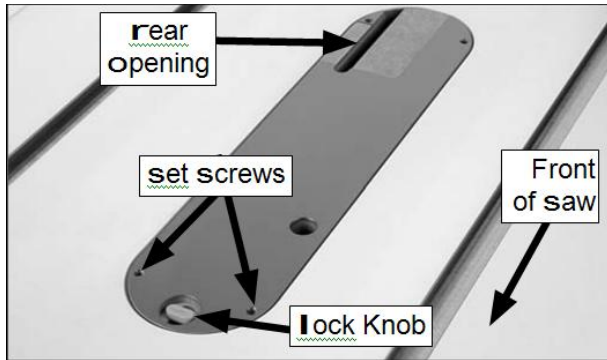


Fig. 8

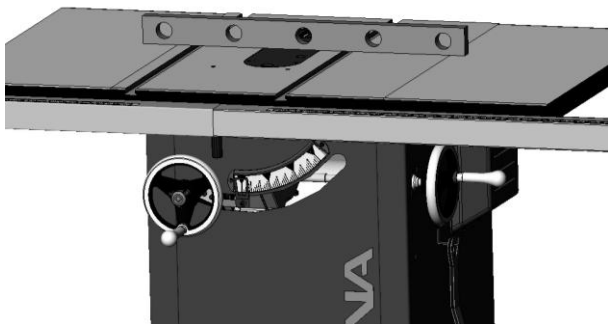


Fig. 9

## SAW BLADE

In Fig. 10

This saw with 10" (250mm) diameter having a center hole diameter of 5/8". Be sure disconnect table saw from power source before operation.

1. Set the blade to 90° and raise it to its highest position.
2. Loosen the Knob Fig.11 on the Table Insert then remove the table insert and blade guard/riving knife, depending on what is installed.

3. Use the arbor wrenches to loosen and remove the arbor nut, flange, and blade.

**Note:** Loosen the arbor nut by counterclockwise .

4. Reinstall the arbor flange and arbor nut then tighten them against the blade. Do not over tighten.

Slide the blade over the arbor with the teeth facing the front of the saw Re-install the arbor flange and arbor nut, and tighten them against the blade. Do not over tighten.

5. Re-install the blade guard/riving knife and table insert.

**! WARNING:** ALWAYS TURN OFF AND UNPLUG THE SAW BEFORE REMOVING/ INSTALLING A RIVING KNIFE.

## FENCE ASSEMBLY

### ALIGN THE FENCE PARALLEL TO THE BLADE

1. Slide the fence over to the right T-slot on your saw table top lock down the fence handle and make a visual check that the fence is parallel with the T-slot all along its length. Also, you can place a small 3/4" thick block of wood, upright into the T-slot and slide it from the front to the back checking its distance from the left edge of the fence Fig. 12.

2. If the fence is not parallel, it can be adjusted by using an Allen key to turn one or both of the screws C or D Fig. 13. Do this slowly, just an eighth to a quarter turn at a time, or you will quickly overshoot the desired adjustment.

Note: It is always good practice to periodically recheck the alignment of your fence to the blade.

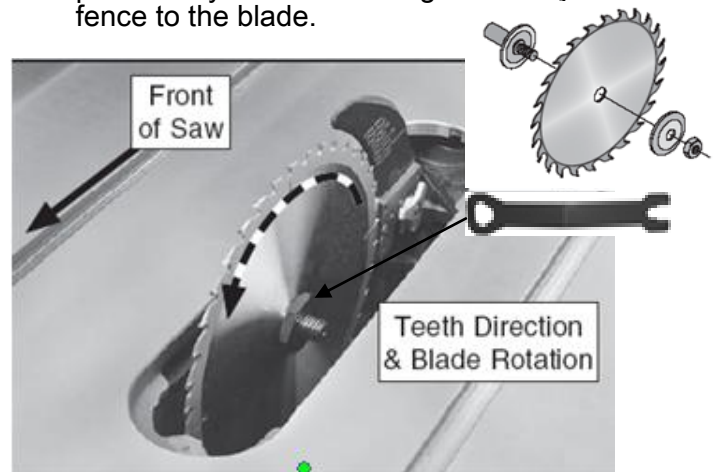


Fig. 10



Fig. 11

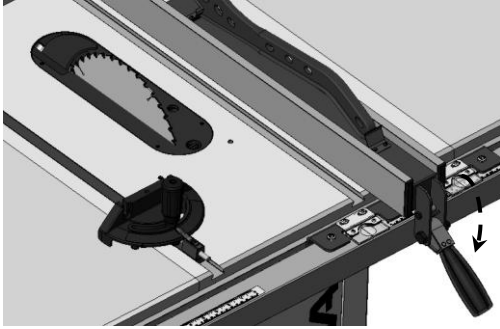


Fig. 12

**! WARNING:** THE RIP FENCE MUST BE PARALLEL TO THE BLADE DURING OPERATION. FAILURE TO SET THE RIP FENCE PARALLEL TO THE BLADE CAN RESULT IN KICKBACK AND POSSIBLE SERIOUS INJURY

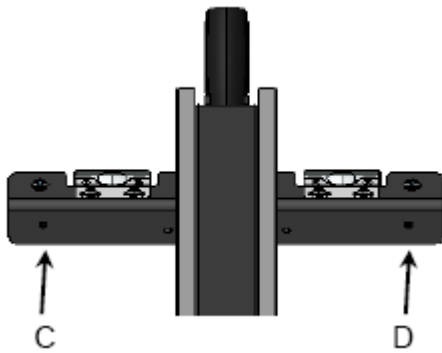


Fig. 13

### ALIGN THE RIP FENCE PERPENDICULAR (90°) TO THE TABLE

Place a machinist square on the table against the fence and look for a gap between the square and the fence (bottom and top) or the table. If needed, adjust either of the two plastic set screws to tilt the fence slightly and square it to the table Fig. 14.

### LEVEL THE FENCE

The fence should be parallel to the table and sit approximately 2mm above the table's surface (so the fence will not scratch the table and a thin work piece will not get stuck or jammed under the fence).

To level and adjust the height of the fence:


1. Loosen the hex nut F on the leveling foot G located under the rear end of the fence Fig. 15.
2. Raise or lower the leveling foot until there is a spacing of 2 mm (approx.) between the bottom of the fence and the table, then

tighten the hex nut to lock the setting of the leveling foot.

3. If needed, to level the fence, adjust the plastic set screws E equally, thereby raising or lowering the front of the fence an equal amount on either side so as not to undo the previous perpendicular adjustment Fig. 16.

### ADJUST & ALIGN RIP FENCE POINTER

Set blade to 90° and raise it to the maximum height. Move the fence till it lightly touches the right side of the blade and push down the

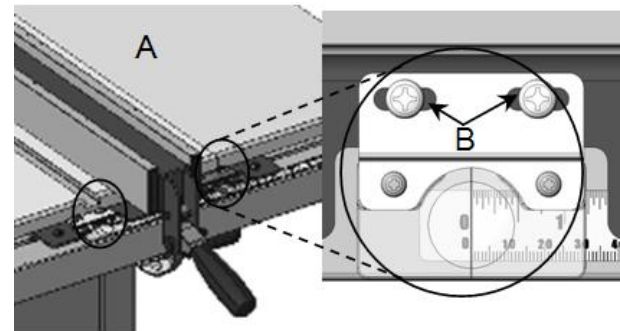

locking lever to lock the fence in place. With the fence locked in place against the blade, loosen the pointer screws B Line up the reference line on the pointer with the zero point on the tape and re-tighten the pointer screws Fig. 17.

**Note:** When changing blades, re-align the pointer with the zero points on the tapes to account for thinner or thicker blades.

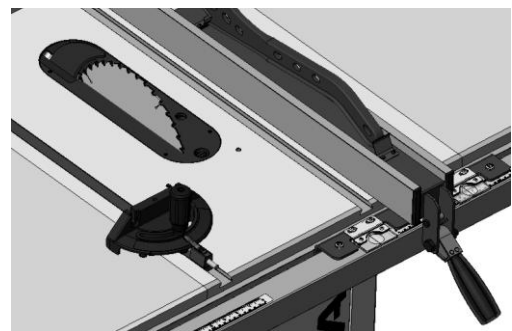


Fig. 14

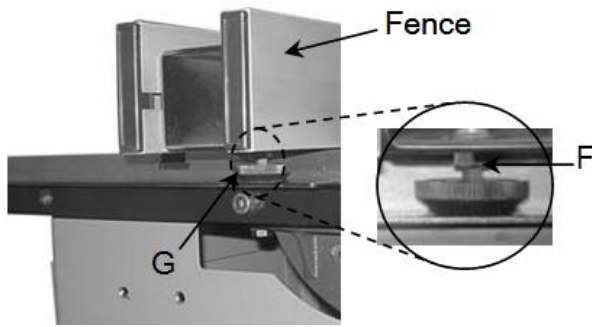


Fig. 15

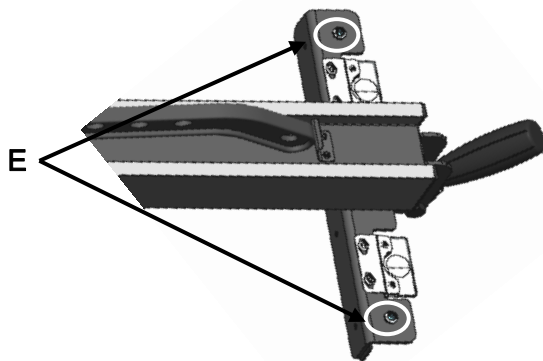


Fig. 16

Fig. 17

## DUST COLLECTOR

There is a 4" dust outlet located on the lower left of the saw cabinet allowing for the connection to a dust collection system (not included) Fig. 18.

1. Fit the 4" dust hose over the dust port, (not included) and secure in place with a hose clamp.
2. Make sure the hose could not come off.  
**Note:** A tight fit is necessary for proper performance.



**WARNING:** ALWAYS TURN ON THE DUST COLLECTOR BEFORE STARTING THE SAW AND STOP THE SAW BEFORE TURNING OFF THE DUST COLLECTOR.

## PUSH STICK

**Always** using push sticks Fig. 19 that reduce the risk of injury by keeping your hands away from the blade while cutting. Whenever your

hands will get within 12" of the blade. To maintain control when cutting large workpieces, start the cut by feeding with your hands then use push sticks to finish the cut, so your hands are not on the end of the workpiece as it passes through the blade.

## MITER GAUGE

The miter gauge is equipped with stop screws that allow you to easily adjust the miter gauge from 45° to the left, 90° and 45° to the right the stop screws contact the shaft Fig. 20, which moves in or out of the way for adjustments slide the miter gauge into the t-slot on the table, then push the sliding shaft all the way into the miter gauge.

To use a setting other than 90°, loosen the lock knob A by turning it counter-clockwise, pull the stop-lock pin B Fig. 21 rotate the miter head to 45°, or any angle shown on the numerical guide. Turn the lock knob clockwise to tighten it.

To check the accuracy of the miter gauge's factory settings, set it at 90° and check it with an L-square or T-square. To verify the setting, make a test cut in scrap stock and then use a square to check the cut piece. Repeat adjustment if necessary.

If the miter gauge needs adjusting, manually turn the head so the pointer is where you think it ought to be, tighten the lock knob and loosen the nut



Fig. 18





Fig. 19

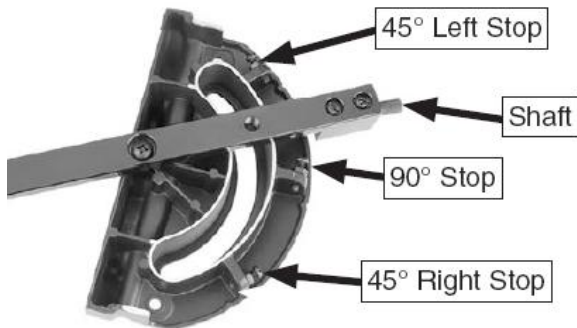


Fig. 20

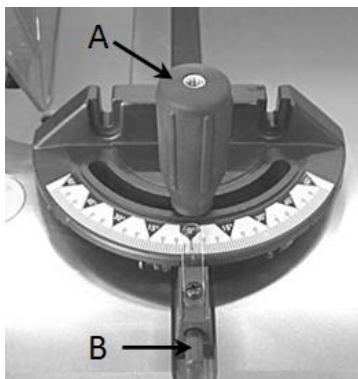


Fig. 21


## MAINTENANCE & ADJUSTMENTS

### PERIODIC MAINTENANCE

- Inspect/test the ON/OFF switch before each use. Do not operate the saw with a damaged switch - replace a damaged switch immediately
- Inspect the saw blade for damage or chipped teeth before each use. Replace a damaged or chipped blade immediately. Never operate the saw with a damaged or chipped blade
- Keep the saw table clean and free of dust, pitch or glue. An occasional light coating of paste wax can be used to protect the cast-iron surface. Ask our local distributor for suggestions on table top cleaners and cast-iron surface protection based on what is readily available in your area.
- Occasionally open the cabinet door and brush off and vacuum out accumulated dust from inside the cabinet and on the blade tilting gears and on or around the

motor.

- Periodically inspect the power cord and plug for damage. To minimize the risk of electric shock or fire, never operate the saw with a damaged power cord or plug. Replace a damaged power cord or plug at the first sign of damage.
- To minimize airborne dust particles periodically inspect all dust collection fittings – retighten as needed.

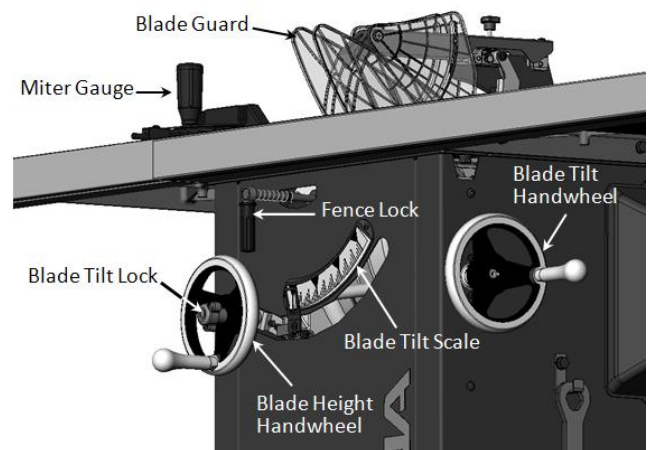


**! WARNING:** MAKE SURE THE SAW HAS BEEN TURNED OFF AND UNPLUGGED FROM THE POWER SOURCE BEFORE PERFORMING ANY MAINTENANCE.

### LUBRICATION


Keep the blade height screw A (under the table on the left side) as well as the blade tilt screw B (under the table on the right side) well lubricated and free of dust or debris. Clean and remove dust, debris, and old lubricant as needed depending on frequency of use.

After cleaning, reapply lubricant as needed. Note: Use any all-purpose grease, available at any hardware store).


The motor and all bearings are sealed and permanently lubricated—no further lubrication is required. No other part of this table saw needs lubrication.

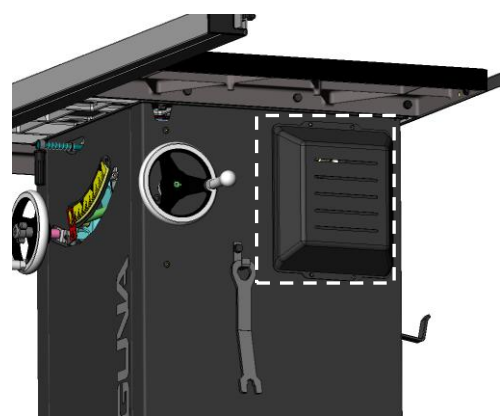

## REMOVE THE MOTOR COVER FOR SCREW A

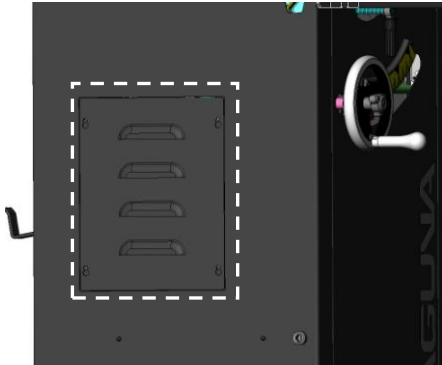

## REMOVE THE SIDE COVER FOR SCREW B

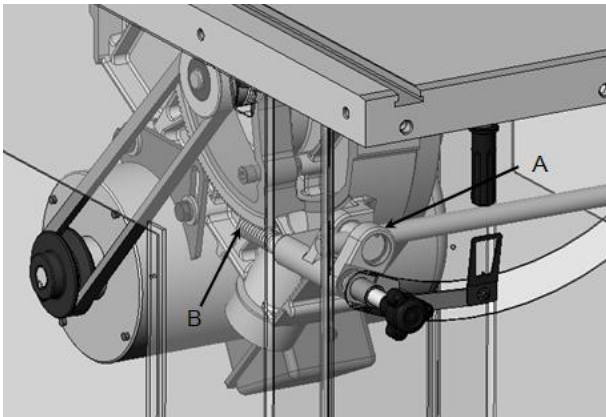

## ADJUSTING THE 45° & 90° BEVEL STOPS

1. Disconnect the machine from the power source.
2. Raise the blade to its highest position and lift the blade guard.
3. Loosen the bevel lock knob and turn the blade tilting handwheel clockwise until it stops.
4. Verify the angle of the blade with a combination square from the left side of the blade, keep the square flat against the table and against the flat part of the blade. Do not touch the teeth or the table insert.

If the blade angle is incorrect, turn the 90° A stop screw located on the table top to the left of the blade one full counter-clockwise turn using the supplied 6 mm allen key Fig. 22.

Turn the hand wheel until the blade is at 90° to the table surface. Then re-tighten the 90° stop screw clockwise until slight resistance is felt. Do not over tighten stop screw.

Verify the 45° setting by tilting the blade as far as possible to the left and using the square, check the angle and if need- ed

adjust as for the 90° stop, this time using the right stop screw B Fig. 23.

## ADJUSTING THE BEVEL ANGLE POINTER

The bevel pointer should read "0" when the blade is at 90° to the table. If not, with the blade set 90° vertical to the table, proceed as follows:

1. Remove the handwheel by loosening the handwheel lock knob A Fig. 24
2. Once the hand wheel has been removed, loosen the cap screw on the pointer mounting bracket with screw driver Fig. 25, and manually align the pointer with the zero on the bevel scale, then re-tighten the screw and re-attach the hand wheel.

**! WARNING:** MAKE SURE THE SAW HAS BEEN TURNED OFF AND UNPLUGGED FROM THE POWER SOURCE BEFORE PERFORMING ANY MAINTENANCE.


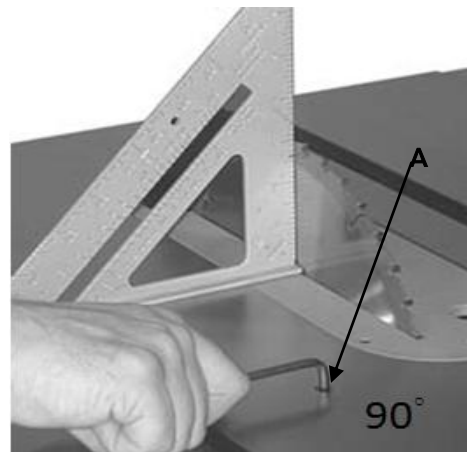


Fig. 22

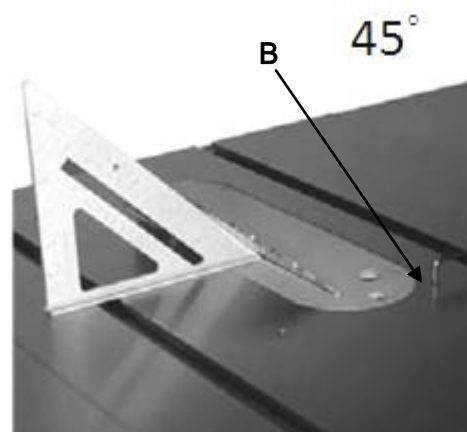

front of the saw and allows the user to lock the tilting mechanism and secure the blade at the desired angle Fig. 27.

To change the angle of the blade:

1. Loosen the bevel locking handle D by turning it counter-clockwise.
2. Turn the handwheel C left or right as required to set the blade to the desired angle. The blade can be tilted to the left anywhere from 0° (90° to the table) to 45°.
3. With the blade tilted to the desired angle, tighten the bevel locking handle by turning it clockwise to lock the tilting mechanism and secure the blade.

Fig. 23

Fig. 24

Fig. 24



Fig. 25

**! WARNING:** TO LIMIT YOUR EXPOSURE TO THE BLADE AND ALSO TO MAXIMISE THE EFFECTIVENESS OF THE ANTI-KICKBACK PAWLS (WHEN USING THE RIVING STYLE SPLITTER & BLADE GUARD), NEVER TAKE MORE BLADE HEIGHT THAN IS REQUIRED TO COMPLETE THE CUT. WHEN SETTING THE BLADE HEIGHT FOR THROUGH-CUTS (CUTS ALL THE WAY THROUGH THE THICKNESS OF A BOARD) SET THE HEIGHT OF THE BLADE TO ROUGHLY 1/4" HIGHER THAN THE THICKNESS OF THE BOARD.

## BLADE HEIGHT ADJUSTMENT

The blade height adjustment handwheel A is located on the front of the saw and there is a lock knob B on the handwheel that allows you to lock the wheel and secure the blade at the desired height Fig. 26.

To raise or lower the blade:

1. Loosen the blade height lock knob B by turning counter clockwise.
2. To raise the blade: turn the handwheel clockwise. To lower the blade: turn the handwheel counter clockwise.
3. With the blade set to the desired height, tighten the lock knob by turning clockwise to lock the blade.

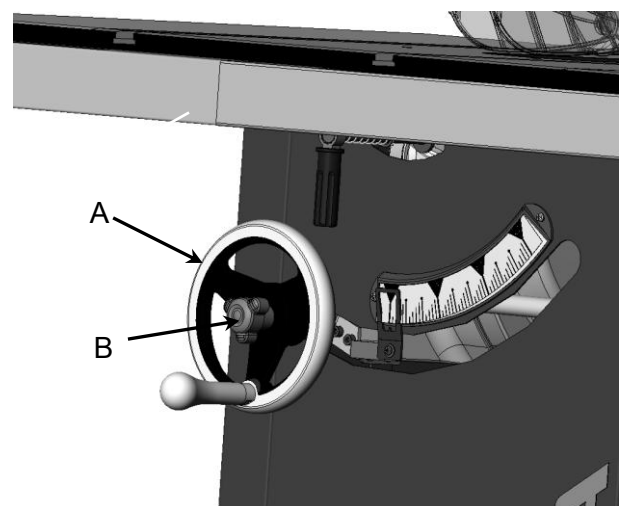


Fig. 26

## BLADE TILT /BEVEL ADJUSTMENT

The blade tilt (bevel) adjustment handwheel C is located on the side of the saw. The bevel locking lever D is located under the table at the

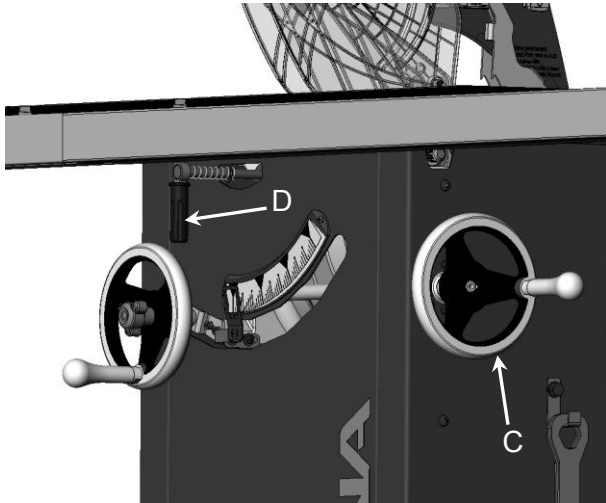


Fig. 27

## TYPE OF CUT

### RIPPING

Cutting a wood plank or sheet of plywood lengthwise to reduce its width is called “ripping”. To rip stock, hold the work with both hands pushing it into the blade as well as firmly against the rip fence so that it is cut straight.



- Never rip or cut wood without using the fence or miter gauge to guide it because the stock could kickback.

- Always use the blade guard and splitter assembly when cutting wood. It has anti-kickback fingers and a splitter to prevent the saw “kerf” (the slit cut by the blade) from closing and binding the blade, which can overload and/or stall the motor or cause the blade to lift and eject the workpiece towards the front of the saw at very high speeds. The blade guard keeps your fingers away from the blade and also reduces the amount of sawdust flying free.
- Although certain operations require the removal of the blade guard and splitter assembly, it should always be replaced for regular cutting.
- Although certain operations require the removal of the blade guard and splitter assembly, it should always be replaced for regular cutting.
- Raise the saw blade only about 1/4" higher than the workpiece to be cut.

As you complete the rip, the wood will either remain on the table, tilt up to be caught on the end of the guard, or fall onto the floor (or outfeed table). The waste part of the stock remains on the table to be removed only after the saw is stopped (unless it is large enough for immediate safe removal).

If the work to be ripped is narrow, it is safer to use a push stick, rather than the hands, to feed it into the blade. Push sticks with non-slip grippers can be purchased, but a shop-made one works just as well. When ripping extremely narrow stock that may not clear the width of the blade guard, or very thin material such as paneling, which may slip between the underside of the fence and the table surface, a strip of wood as an auxiliary guide can be attached to the fence.



**WARNING:** Keep the blade guard installed and in the down position. Failure to do this could result in serious personal injury or death.

**Notice:** NEVER REACH IN TOWARDS THE BLADE WHILE THE BLADE IS STILL SPINNING! WHENEVER A RIP CUT IS COMPLETED, TURN OFF THE SAW AND WAIT FOR THE BLADE TO COME TO A COMPLETE STOP BEFORE REACHING IN TO REMOVE THE WORKPIECE OR THE WASTE MATERIAL.

### BEVEL RIPPING

Bevel ripping is performed the same as ripping but with the saw blade set to an angle not

perpendicular with the table surface. To tilt the blade to the left, anywhere between 0° and 45°. This is used most often when cutting bevels, compound miters or chamfers. After changing the bevel angle verify the alignment of the guard and splitter; make sure there is clearance with the saw blade.

### RIPPING SMALL WORK PIECES

Do not attempt rip cuts if the work piece is too small, as this will oblige you to place your hands too close to the blade and put you at serious risk of injury. When ripping narrower widths; use a push block or a push stick in order to avoid placing hands near the blade.

### CROSS CUTTING

Cutting against the grain, to shorten the length of a board is crosscutting. With some smaller sized and rectangular pieces, you often have the choice of ripping or crosscutting. Always use the miter gauge, when crosscutting; never cut a piece unsupported. The miter gauge may be used in either slot, but most operators prefer the left groove for typical work. When the blade is tilted for bevel cutting, use the table slot that does not cause interference with your hand or the saw blade guard Fig. 28

To begin crosscutting, place the work on the miter gauge and, with the motor OFF, slide it up close to the blade to align the outer edges of the teeth with your cut mark Fig. Keep a firm grip as you pull the miter gauge and the wood back away from the blade. Lower the blade guard, turn on the saw and make the cut. When the work is cut through, move one or both cut pieces. If long enough to handle without danger immediately off to the side, away from the turning blade. Turn off the motor.

### BEVEL CROSS CUTTING

This procedure is the same as cross cutting except that the blade is set to an angle other than 0. After changing the bevel angle, verify the alignment of the guard and splitter and verify that there is clearance with the saw blade Fig. 29.



### MITER CUTS

This operation is the same as cross cutting, except the miter gauge is set to an angle other than 0. Hold the work piece firmly against the miter gauge and feed the workpiece slowly into the blade to prevent it from moving during the cut Fig. 30.

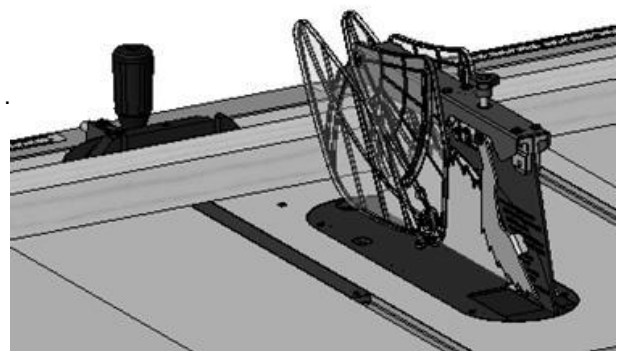


Fig. 28

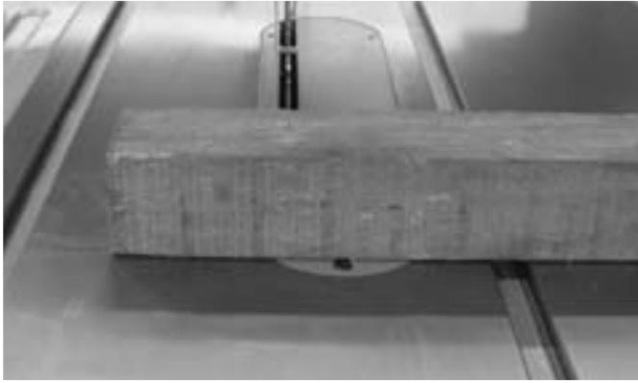


Fig. 29



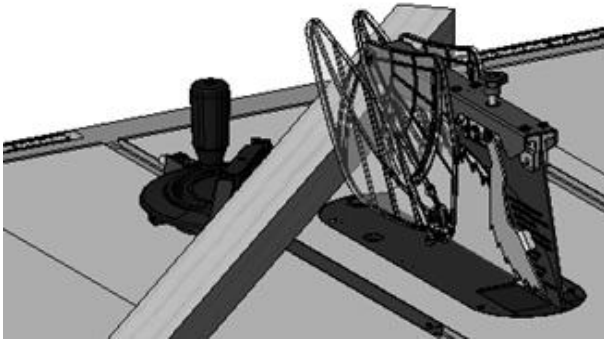




Fig. 30





# PARTS DIAGRAMS



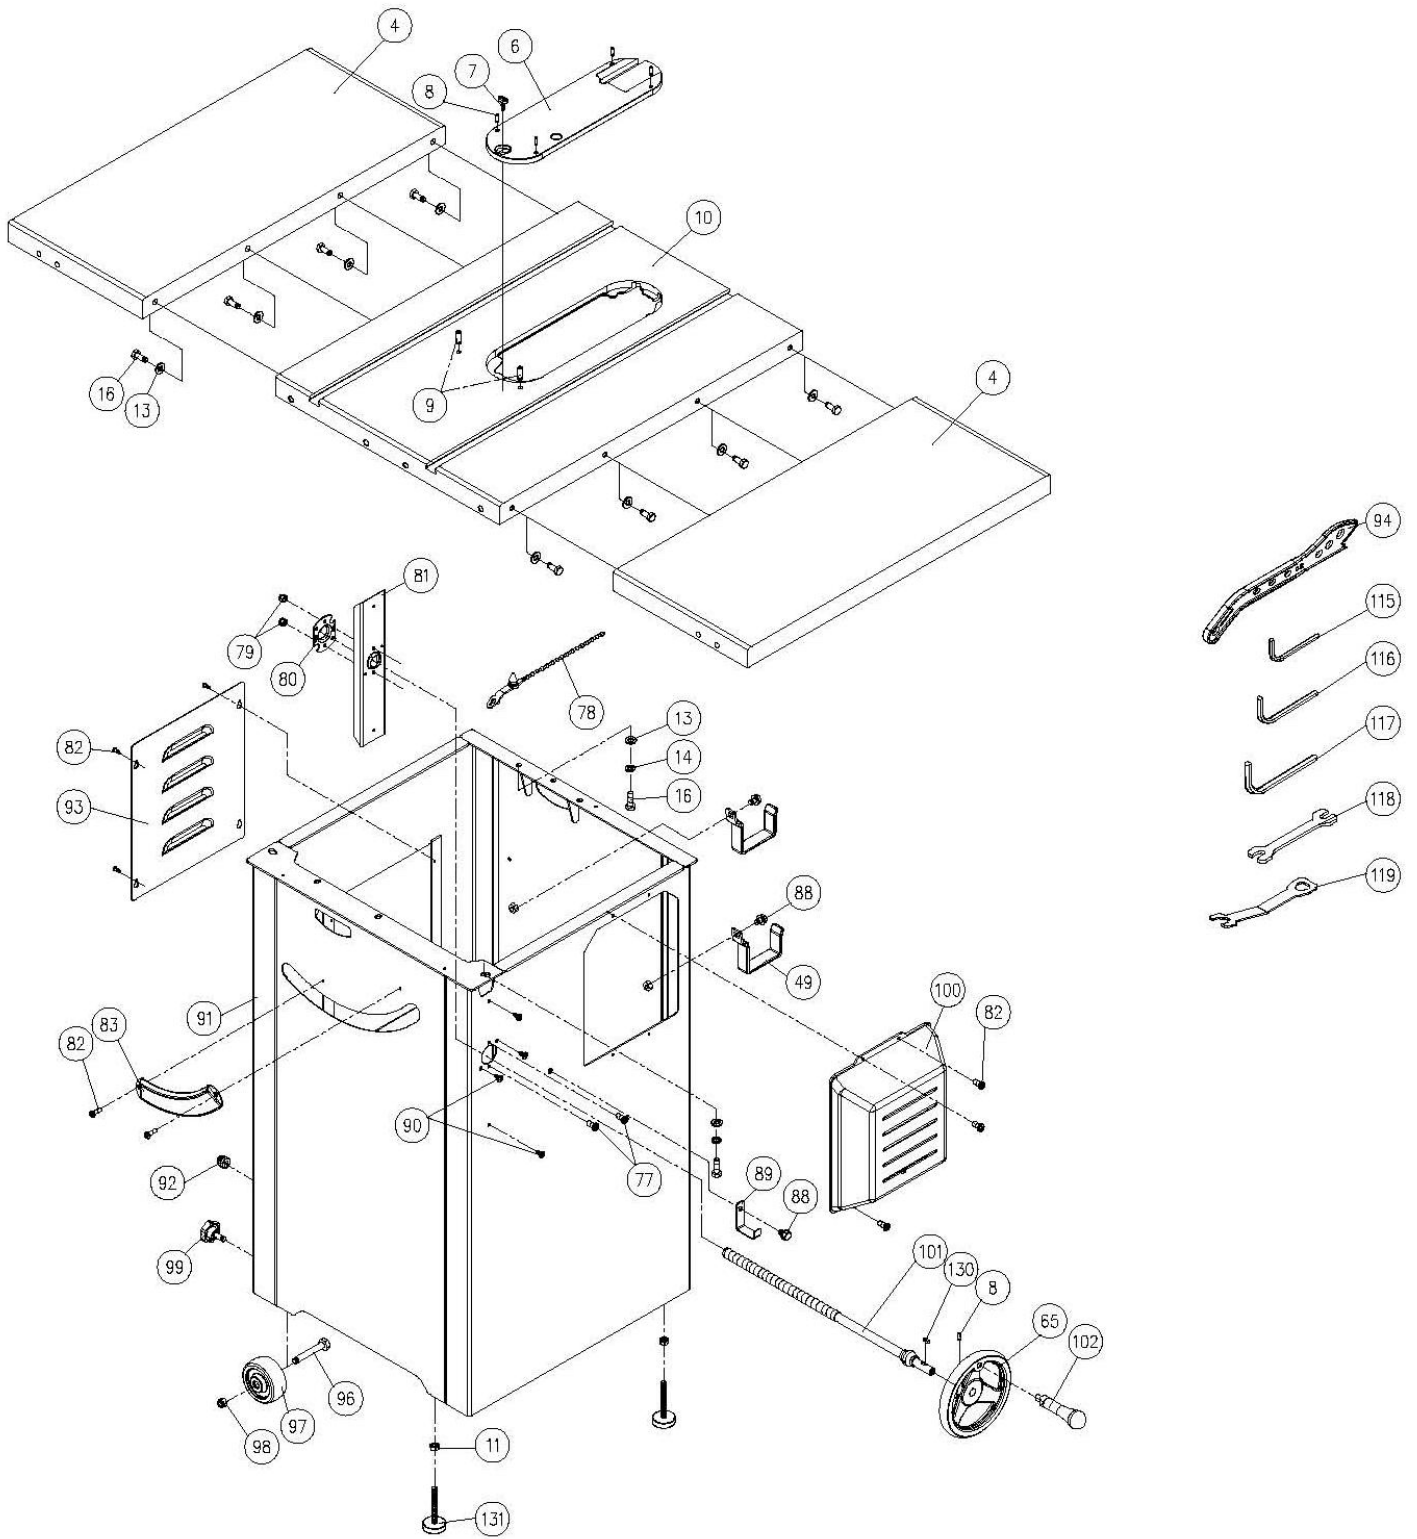

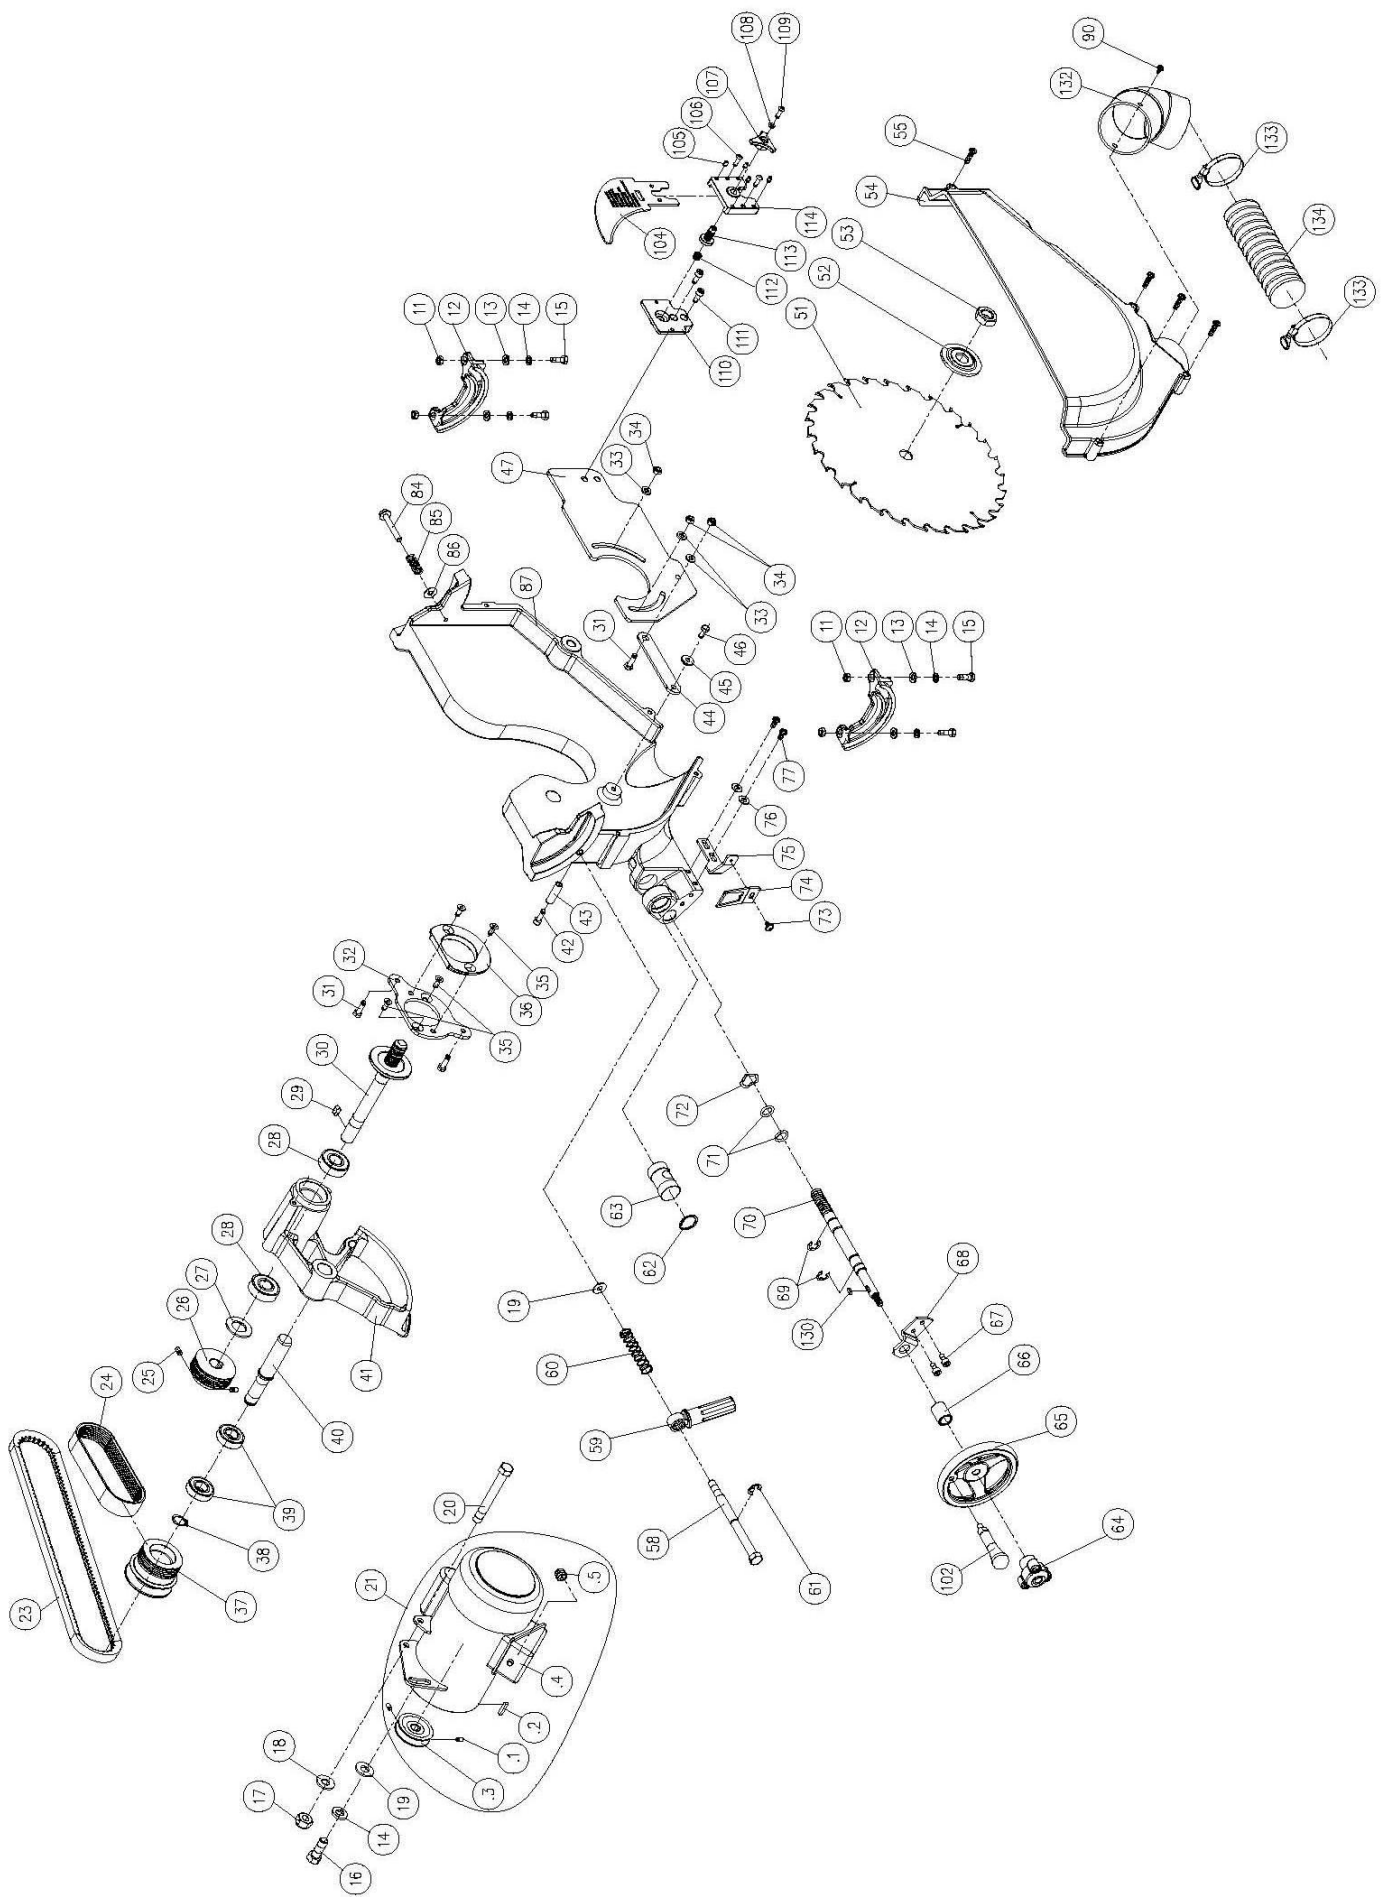

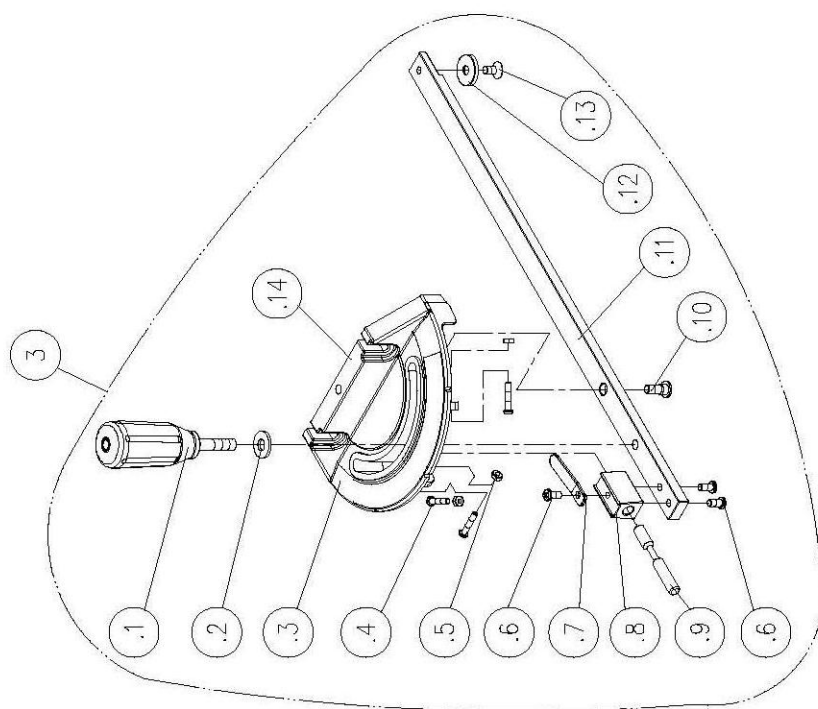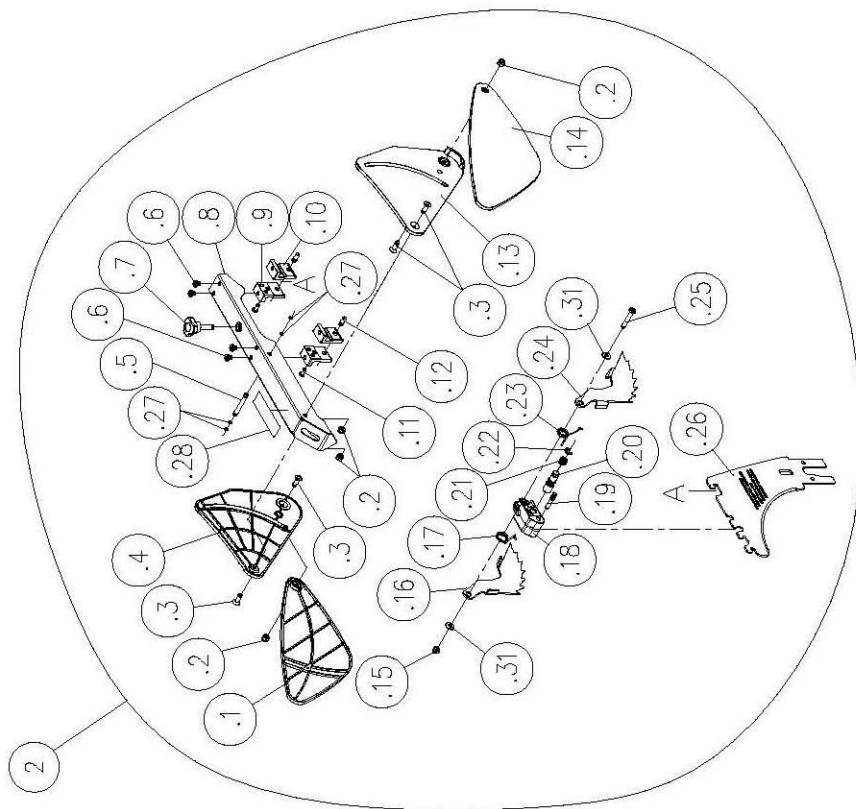

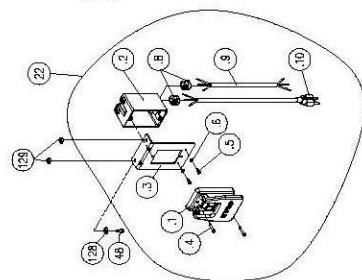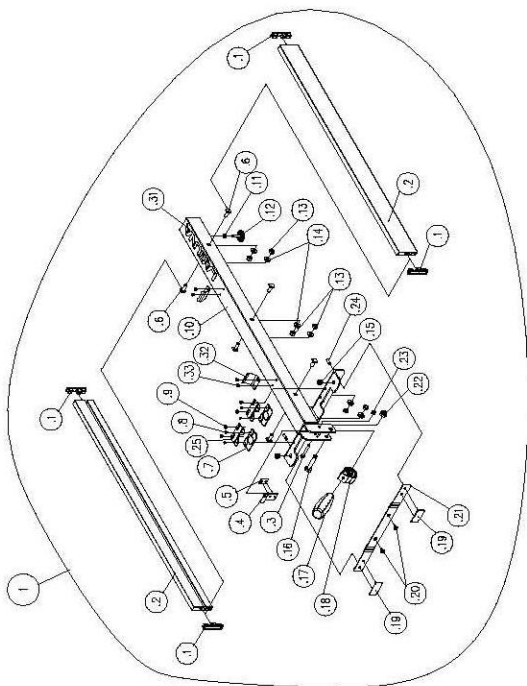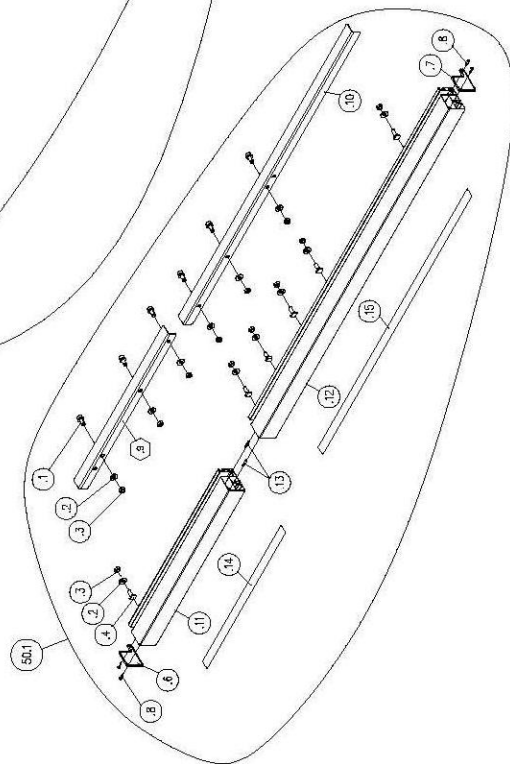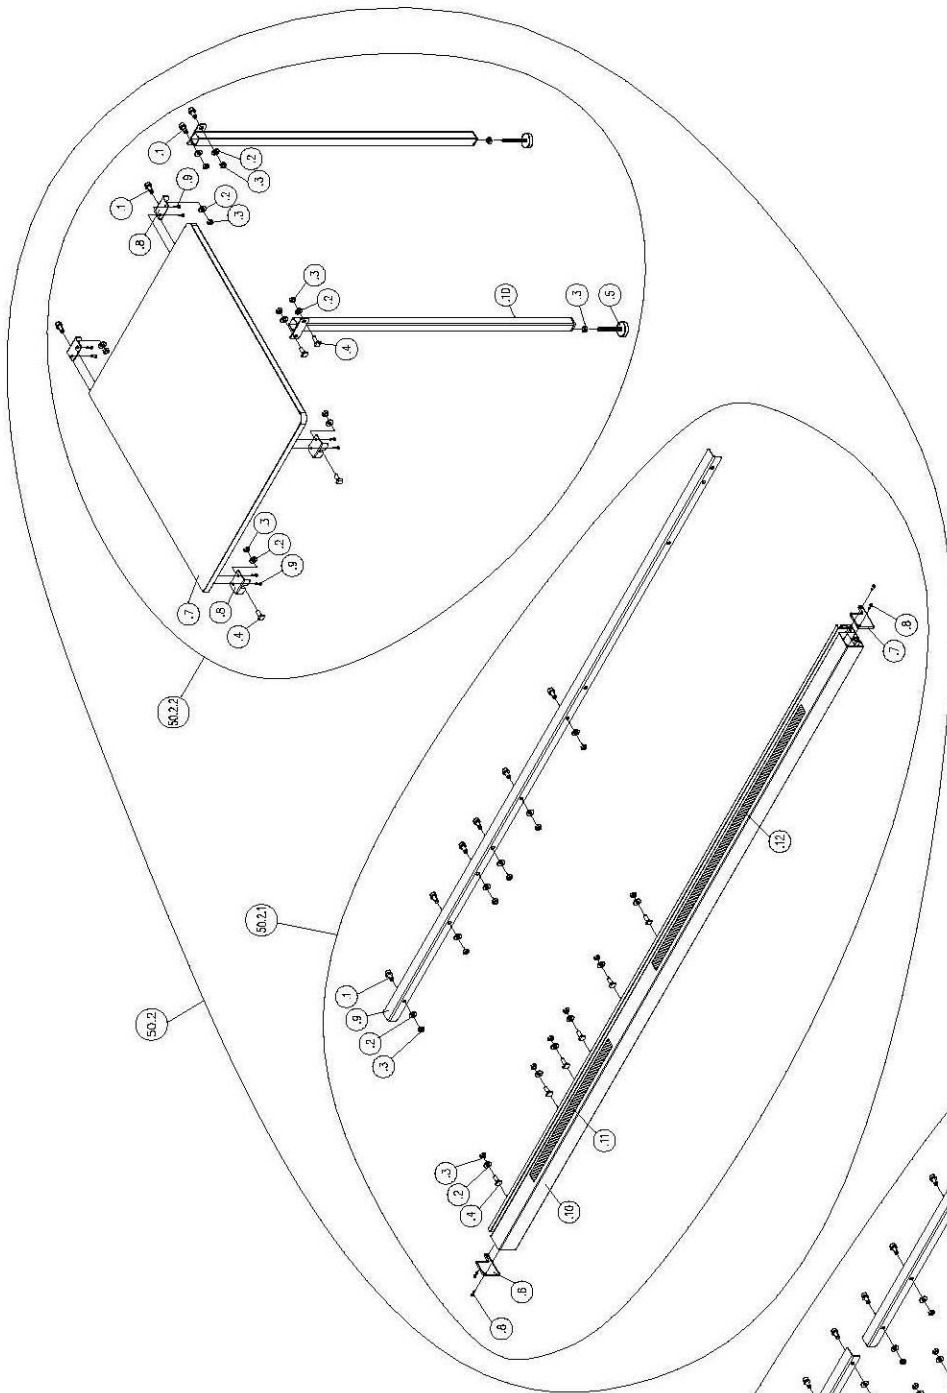

## PARTS LIST

Key	Part No.	Descriptions	Q'ty	
1	923135-000	Rip Fence Assembly	1	
1.1	250483-615	End Cap	4	
1.2	310100-909	Adaptor	2	
1.3	000002-308	Hex. screw	M6*1.0P*45	1
1.4	171993-904	Bracket	1	
1.5	250602-621	Frictional Plate	1	
1.6	048701-101	Square Bolt	M8*1.25P*20	6
1.7	250799-620	Pointer	2	
1.8	001101-205	Round Head Tapping Screw	M3*1.06P*6	4
1.9	000304-210	Pan Head Screw	M6*1.0P*6	4
1.10	173142-308	Fence Body	1	
1.11	008005-100	Hex Nut	M6*1.0P	1
1.12	250587-615	Frictional Wheel	1	
1.13	008006-100	Hex Nut	M8*1.25P	6
1.14	006001-049	Flat Washer	8.5*16*2t	6
1.15	250472-621	Plastic Set Screw	2	
1.16	000004-306	Hex. screw	M10*1.5P*50	1
1.17	230301-615	Handle	1	
1.18	922141-000	Compress Cam Assembly	1	
1.19	250471-621	Frictional Plate	2	
1.20	002103-103	Flat Head Screw	M6*1.0P*8	2
1.21	172341-904	Bracket for Frictional Plate	1	
1.22	008308-100	Anit-loose Nut	M10*1.5P	1
1.23	008304-100	Anit-loose Nut	M6*1.0P	1
1.24	001902-109	Set screw	M6*1.0P*6	2
1.25	172847-905	Bracket for Pointer	2	
1.32	270007-901	Spring Plate	2	
1.33	000302-101	Pan Head Screw	M4*0.7P*6	4
2	923055-000	Blade Guard Assy	1	
2.1	250821-620	Protective Shield -Left	1	
2.2	008302-200	Anit-loose Nut	M5*0.8P	4
2.3	000402-207	Flat Head Screw	M5*0.8P*15	4
2.4	250820-620	Left Cover	1	
2.5	360962-901	Pin	1	
2.6	000303-101	Pan Head Screw	M5*0.8P*6	4

Key	Part No.	Descriptions	Q'ty	
2.7	230336-615	Bolt	1	
2.8	171154-904	Rod	1	
2.9	130270-903	Rod Bracket -Left	2	
2.10	130271-903	Rod Bracket -Right	2	
2.11	000302-103	Pan Head Screw	M4*0.7P*10	2
2.12	360960-901	Pin	2	
2.13	250818-620	Right Cover	1	
2.14	250819-620	Protective Shield -Right	1	
2.15	008302-100	Anit-loose Nut	M5*0.8P	1
2.16	171378-904	Anti-Kick Finger -Left	1	
2.17	280162-901	Spring	1	
2.18	090149-910	Block	1	
2.19	360864-000	Pin	1	
2.20	360865-901	Spreader Shaft	1	
2.21	280160-901	Spring	1	
2.22	010204-000	Retaining Ring	ETW-7	1
2.23	280163-901	Spring	1	
2.24	171379-904	Anti-Kick Finger -Right	1	
2.25	000303-110	Pan Head Screw	M5*0.8P*30	1
2.26	171153-904	Spreader	1	
2.27	043323-000	O-Ring	P3	4
2.28	573543-000	Warning Label	1	
2.31	006001-012	Flat Washer	5.3*12*1.0t	2
3	920719-000	Miter Gauge Assy	1	
3.1	920720-000	Miter Gauge Handle Assy	1	
	380202-905	Nut	1	
	250292-000	Handle	1	
	000003-217	Hex. screw	M8*1.25P*75	1
3.2	006001-049	Flat Washer	8.5*16*2.0t	1
3.3	090109-008	Miter gauge body	1	
3.4	000302-108	Pan Head Screw	M4*0.7P*20	3
3.5	008002-100	Hex Nut	M4*0.7P	3
3.6	000303-103	Pan Head Screw	M5*0.8P*10	3
3.7	250226-620	Pointer	1	
3.8	130057-903	Spacer	1	
3.9	360447-901	Angle Set Bar	1	
3.10	290023-901	Shoulder Screw	1	

Key	Part No.	Descriptions	Q'ty	
3.11	380079-904	Slot Bar	1	
3.12	380069-901	Ring	1	
3.13	230217-901	Flat Head Screw	M6*1.0P*8	1
3.14	571614-000	Miter Scale	1	
4	051050-000	Extension Table	2	
5	520001-311	Box	710*320*50	2
6	922130-000	Table Insert Assembly	1	
7	250822-616	Bolt	1	
8	001901-104	Set screw	M5*0.8P*12	5
9	001903-103	Set screw	M8*1.25P*20	2
10	051136-000	Table	1	
11	008006-100	Hex Nut	M8*1.25P	6
12	051135-000	Trunnion Support	2	
13	006001-049	Flat Washer	8.5*16*2.0t	15
14	006305-100	Spring Washer	8.2*15.4	8
15	000003-105	Hex. screw	M8*1.25P*25	4
16	000003-104	Hex. screw	M8*1.25P*20	12
17	008308-100	Anit-loose Nut	M10*1.5P	1
18	006001-071	Flat Washer	10*25*3.0t	1
19	006001-041	Flat Washer	8.2*22*3.0t	2
20	000004-208	Hex. screw	M10*1.5P*80	1
21.1	900804-000	Motor Assy	2HP*1PH	1
21.2	900807-000	Motor Assy	1.75HP*1PH	1
22.1	937646-000	Magnetic Switch Assy.	230V	1
22.2	937653-000	Magnetic Switch Assy.	120V	1
23	014403-000	V-Belt	17-320	1
24	014342-000	Poly V-Belt	125J-6	1
25	001902-101	Set screw	M6*1.0P*10	2
26	380997-000	#N/A	1	
27	006003-100	Flat Washer	15.5*21*0.8	1
28	030206-002	#N/A	6202	2
29	012003-006	Key	5*5*18	1
30	380996-901	Arbor	1	
31	000002-104	Hex. screw	M6*1.0P*20	3
32	172944-904	Fixed Plate	1	
33	006001-034	Flat Washer	6.7*16*2.0t	3
34	008304-100	Anit-loose Nut	M6*1.0P	3

Key	Part No.	Descriptions		Q'ty
35	000702-102	Socket Hex. Screw	M6*1.0P*12	4
36	130272-903	Clamper Support		1
37	380998-902	Pulley		1
38	010006-000	Retaining Ring	STW-15	1
39	030213-002	Bearing	6002	2
40	360964-000	Long Rod		1
41	051099-000	Shaft Gear		1
42	000104-114	Cap Screw	M8*1.25P*50	1
43	160002-903	Bushing		1
44	172946-904	Rod		1
45	160067-000	Packing		1
46	000001-109	Hex. screw	M5*0.8P*12	1
47	172941-904	Stretch Out Plate		1
48	000002-101	#N/A	M6*1.0P*12	2
49	170541-904	Slide Shelf		2
50.1	923132-000	36" Rail Assy.		
.1	001803-102	CAP Screw w/ Spring Washer	M8*1.25P*20/8.2*15.4	6
.2	006001-049	Flat Washer	8.5*16*2.0t	12
.3	008006-100	Hex Nut	M8*1.25P	12
.4	048701-101	Square Bolt	M8*1.25P*20	6
.6	850673-000	Rail End Cap Assembly		1
.7	250698-615	End Cap - Left		1
.8	250699-615	End Cap - Right		1
.9	001102-604	Self-Tapping Screw	M4*1.59P*12	4
.11	172342-904	Rear Rail- Left		1
.12	172343-904	Rear Rail- Right		1
.13	310163-909	Front Rail - Left		1
.14	310164-909	Front Rail - Right		1
.15	360249-905	Pin		2
.16	573035-000	Length Scale ( L )	0"~12"	1
.17	573036-000	Length Scale ( R )	0"~36"	1
50.2	923133-000	52" Rail with Right Table Assy		1
50.2.1	923141-000	52" Rail Assembly		1
.1	001803-102	CAP Screw w/ Spring Washer	M8*1.25P*20/8.2*15.4	6
.2	006001-049	Flat Washer	8.5*16*2.0t	12
.3	008006-100	Hex Nut	M8*1.25P	12
.4	048701-101	Square Bolt	M8*1.25P*20	6



Key	Part No.	Descriptions		Q'ty
.6	250698-615	End Cap - Left		1
.7	250699-615	End Cap - Right		1
.8	001102-604	Self-Tapping Screw	M4*1.59P*12	4
.9	173138-308	Rear rail		1
.10	310274-909	Front Rail		1
.11	573035-000	Length Scale ( L )	0"~12"	1
.12	572537-000	Length Scale ( R )	52"	1
50.2.2	923142-000	#N/A		1
.1	001803-102	CAP Screw w/ Spring Washer	M8*1.25P*20/8.2*15.4	4
.2	006001-049	Flat Washer	8.5*16*2.0t	8
.3	008006-100	Hex Nut	M8*1.25P	10
.4	048701-101	Square Bolt	M8*1.25P*20	4
.5	230041-000	Leveling foot		2
.7	440038-000	PDF Table		1
.8	173139-902	Brace		4
.9	230086-901	Self-Tapping screw		8
.10	190205-308	Steel Tube		2
51	390017-000	Sawblade		1
52	170518-901	Sawblade clamp		1
53	380205-901	Nut	TW5/8"-12	1
54	250836-615	Dust Guard		1
55	000303-210	Pan Head Screw	M5*0.8P*30	4
58	360653-902	Fix Shaft Bolt		1
59	920693-000	Handle Assy		1
60	280060-000	Spring		1
61	010205-000	Retaining Ring	ETW-8	1
62	010115-000	Retaining Ring	RTW-24	1
63	360695-000	Guide shaft		1
64	920703-000	Fixing Knob		1
65	240061-008	Handwheel		2
66	190054-902	Spacer		1
67	000102-104	Cap Screw	M5*0.8P*12	2
68	170914-902	Fence Blocl		1
69	010208-000	Retaining Ring	ETW-12	2
70	361098-000	Elevated Screw		1
71	043303-000	O-Ring	P12	2
72	006705-100	Wave Washer	WW-16	1

Key	Part No.	Descriptions		Q'ty
73	001601-101	Round Head Screw w/Washer	M4*0.7P*8/4*10*0.8t	1
74	170912-156	Pointer		1
75	172945-902	Bracket		1
76	006001-022	Flat Washer	6.3*13*1.0t	2
77	000303-104	Pan Head Screw	M5*0.8P*12	4
78	230297-615	Fixing Pin		2
79	008302-100	Anit-loose Nut	M5*0.8P	2
80	170932-901	Clamper Support		1
81	170933-901	Fixed Plate		1
82	000302-203	Pan Head Screw	M4*0.7P*10	10
83	250248-615	Bracket		1
84	000902-405	Hex. Screw w/washer	M6*1.0P*40	1
85	280059-000	Spring		1
86	006001-026	Flat Washer	6.4*20*3.0t	1
87	051098-000	Turning		1
88	049201-102	Hex Screw w/Washer	M8*1.25P*12	1
88	049201-102	Hex Screw w/Washer	M8*1.25P*12	2
89	170965-904	Fix Plate		1
90	001103-901	Round Head Screw	M4.5*1.81P*9	5
91	173557-000	Case		1
92	020004-000	Strain Relief	SB8R-1	1
93	173024-000	Side Cover		1
94	230334-615	Push Sticks		1
96	000003-316	Hex. screw	M8*1.25P*60	2
97	250399-615	Wheel		2
98	008306-100	Anit-loose Nut	M8*1.25P	2
99	004001-101	Knob	5/16"-18NC*3/4"	2
100	250362-615	Motor Cover		1
101	923529-000	Leadscrew Assembly		1
102	230173-916	Handle		2
104	171430-904	Riving Knife		1
105	001902-110	SET Locking screw	M6*1.0P*8	4
106	000804-106	Round Head Screw	M5*0.8P*16	2
107	090244-920	Knob		1
108	006302-100	Spring Washer	5.1*9.3	1
109	002503-101	Round Head Socket Lock Screw	M5*0.8P*12	1
110	130268-903	Bracket for Riving Knife		1

Key	Part No.	Descriptions		Q'ty
111	000104-102	Cap Screw	M8*1.25P*10	2
112	280186-901	Spring		1
113	380988-901	Knob		1
114	130269-903	Block		1
115	040002-000	Hex. Wrench	2.5mm	1
116	040004-000	Hex. Wrench	4mm	1
117	040006-000	Hex. Wrench	6mm	1
118	040203-000	Open Wrench	11*13	1
119	170399-904	Spanner		2
128	006001-033	Flat Washer	6.7*16*1.0t	2
129	008603-100	Square Nut	M6*1.0P	2
130	012002-005	Key	4*4*12	2
131	230041-000	Leveling foot		2
132	920687-000	Adapater		1
133	042608-000	Clip		2
134	042615-000	Dust Tube		1